

## Additional information



### Driver indicator lights:

On the top edge of the driver, colour indicator lights are displayed representing the various functions.

Green = Infusion

Yellow = Aspiration

Flashing Red = System over pressure warning

Steady Red = End of driver life

### To remove the syringe from the driver:

Press the square coloured button on the side of the driver. The syringe will release from the driver.

### End of driver life indicator:

Once the end of driver life indicator on the driver (steady red light) comes on, the component should be disposed of in accordance with hospital procedure. Do not start a procedure if the end of driver life indicator is already on. If the end of driver light indicator lights up during a procedure, immediately disconnect the syringe and either replace the driver or complete the procedure manually.

## KEY POINTS TO REMEMBER

- Remove the black cap off the driver before use and dispose
- Never store the driver with a syringe attached

Comprehensive Instructions for Use are available via the Medovate website as well as being supplied with the product.

Please read the Instructions for Use before using SAFIRA® for the first time.

**MEDOVATE**  
Developing Innovation

medovate.co.uk

Email: [enquiries@medovate.co.uk](mailto:enquiries@medovate.co.uk)

X :@Medovate

LinkedIn: Medovate Limited

**ERMED AG**

Tel 052/687 40 80

[www.erved.ch](http://www.erved.ch)

Zunderst Wylar 14

Fax 052/687 40 89

[info@erved.ch](mailto:info@erved.ch)

8226 Schleithelm

**SAFIRA®**  
Giving Anaesthetists Control

## SAFIRA® QUICK START GUIDE



medovate.co.uk

**MEDOVATE**  
Developing Innovation

# Quick start: the SAFIRA® system

**IMPORTANT:** Please ensure the black protective foam cap is removed from the syringe driver and disposed.



1. Attach the foot pedal or palm operator to operator the driver. The plug end of the cord goes into the socket.


2. Place the foot pedal on the floor below, near the surgical site in a convenient location or place palm operator on hand.

3. Open the sterile package and remove sterile syringe; fill and prepare the syringe.

Please ensure all equipment is clean (if not brand new) and all relevant expiration checks are carried out in line with local procedures.




4. Connect the needle to the syringe. Once secured, prime the needle and tubing set to remove the air.

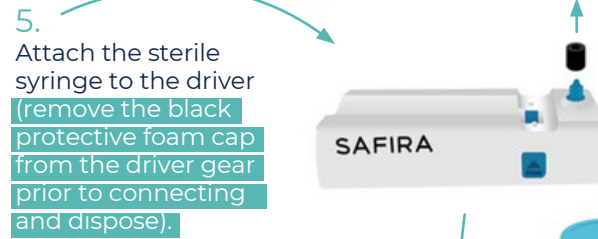


5. Attach the sterile syringe to the driver (remove the black protective foam cap from the driver gear prior to connecting and dispose).

Align syringe with the driver and gently press the syringe into the driver until you hear it "click" into place.

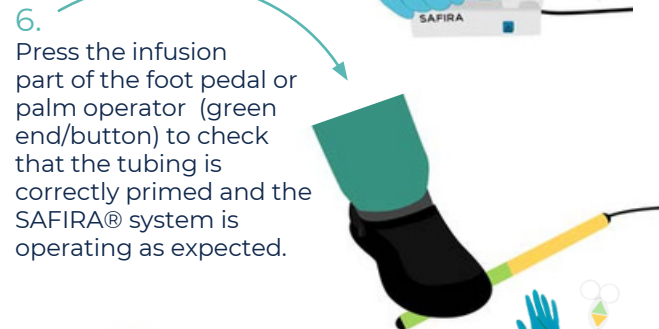

6. Press the infusion part of the foot pedal or palm operator (green end/button) to check that the tubing is correctly primed and the SAFIRA® system is operating as expected.

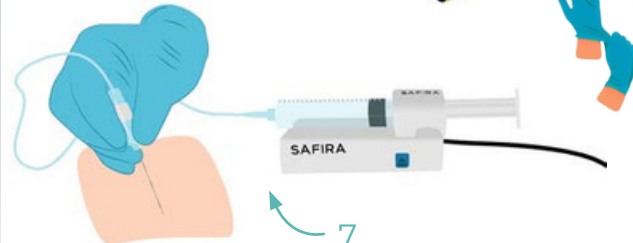


7. Begin the anaesthetic procedure following local hospital guidelines. The SAFIRA® unit limits injection pressure to less than 20-psi by automatically stopping.




8. Should an infusion stoppage be encountered during the procedure:

- A. Verify needle patency and/or reposition needle to allow low pressure infusion and
- B. Reset the flashing red light (infusion stopped) alert on the driver unit.

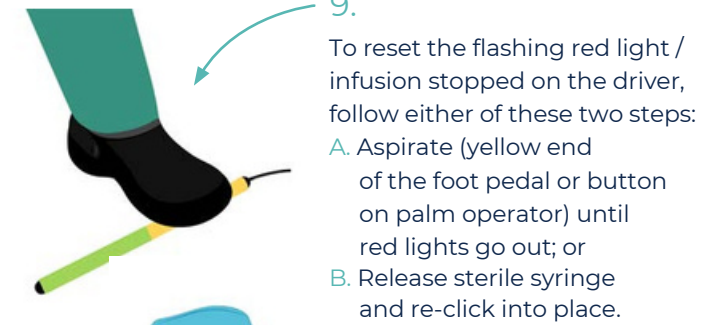

9. To reset the flashing red light / infusion stopped on the driver, follow either of these two steps:  
 A. Aspirate (yellow end of the foot pedal or button on palm operator) until red lights go out; or  
 B. Release sterile syringe and re-click into place.

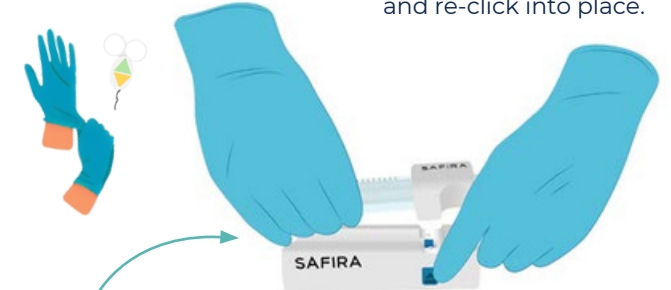

10. When the procedure is complete:
- A. Remove the single use syringe from the driver after the procedure. Failure to do so will drain the battery within 24 hours
  - B. Dispose of the syringe using acceptable standard practice for biohazard waste; and
  - C. Clean and store driver and foot pedal in accordance with hospital procedure for reuse.
- Driver batteries are adequate for approximately 200 procedures.